

164 Aime Vincent, Vaudreuil, Qc, Canada, J7V 5V5  
 Phone: (450) 424-8150, Fax: (450) 424-9262  
 website: rftel.com e-mail: info@rftel.com

**Bulletin #** 2008  
**Date:** March 27, 2001

**Part affected:** Repeater Configuration in Service Manual  
**Products affected** RT9150, RT9450  
**At issue:** Revised option select switch setting, page 12 of RT9000 manual

## 1-15 Option Select Switch

Different operating modes for the RT9000 Radio Telephone can be selected via the setup program together with an 8 position DIP switch and certain links located on the controller board.  
 The table below shows the switch position and links for various operating modes

**SW1** 1 2 3 4 5 6 7 8

### Additional settings

**S1 Central Office**

On x x x  
 Off x x x x x

**S1 Subscriber**

On x x x x x x x  
 Off x x x x

**S1 4W E&M (COR operated only)**

On x  
 Off x x x x x x x

- Activate Repeater (not 4W E&M) via setup program  
 - Insert LK2

**S1 C.O. Payphone SPM 16kHz**

On x x x x  
 Off x x x x

**S1 C.O. Payphone SPM 12kHz**

On x x x x  
 Off x x x x x

**S1 Sub Payphone SPM**

On x x x x x x  
 Off x x x

- Insert LK 2 for 16kHz operation

**S1 Sub Repeater 4W E&M**

- Activate repeater in setup program

**picture**